

What's in the box?



What's In The Box
Gift Pack x1, Harness (Monitor, OEM Ready Plug, Magnet Sensor) x1, Magnet x1, Monitor Holder x1, Gift Pack x1, 2027 Display (Screen), User Manual x1



Plug & Play Harness



Gear Shifter Magnet



Indicator Screen Holder (RHD)




Gift Pack - We Got Your Back!
— Photo for representation only, may differ per product —

Harness (Monitor, Magnet Sensor, OEM Ready Plug) x1, Magnet x1, Indicator Holder x1, Gift Pack x1

Gear Indicator - Installation Steps:

Step 1: Remove - Center Console

Total 6x PH2 screws, 3 on each side

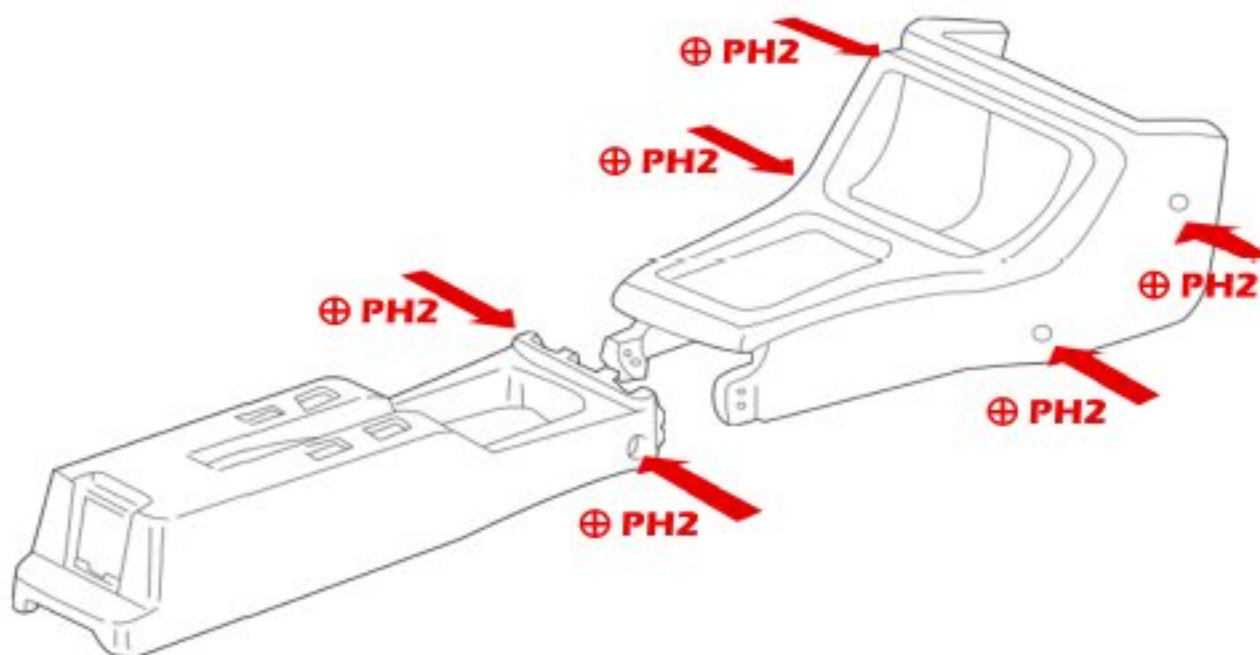

Step 2: Remove - Radio Panel



2.1: Use a trim removal tool or sticky tape to pull out the Rear Defrost and Hazard Light button. Unplug the connectors.

2.2: Firmly pinch the AC slider and top vent slider, then pull HARD to remove them.

2.3: Remove the screws highlighted in red in the picture above. Follow the arrows to easily locate them.

2.4: Use a long magnetic screwdriver to remove the hidden screws located deep inside where the Defrost and Hazard buttons were (marked pink).

2.5: Remove the last hidden screw holding the AC unit in place. This screw can be seen from underneath (also marked pink).


2.6: Remove the head unit and disconnect all plugs and cables.

2.7: Disconnect all plugs and wiring connected to the AC unit, and unplug the blue connector on the OEM clock.

2.8: Carefully pry up the radio panel from the edges using a trim tool.

2.9: Remove the Clock & Disconnect the BLUE PLUG (2 hidden PH2 screws, Can access once the radio panel is off, from the back of the OEM Clock)

Step 3: Magnet & Sensor Installation.

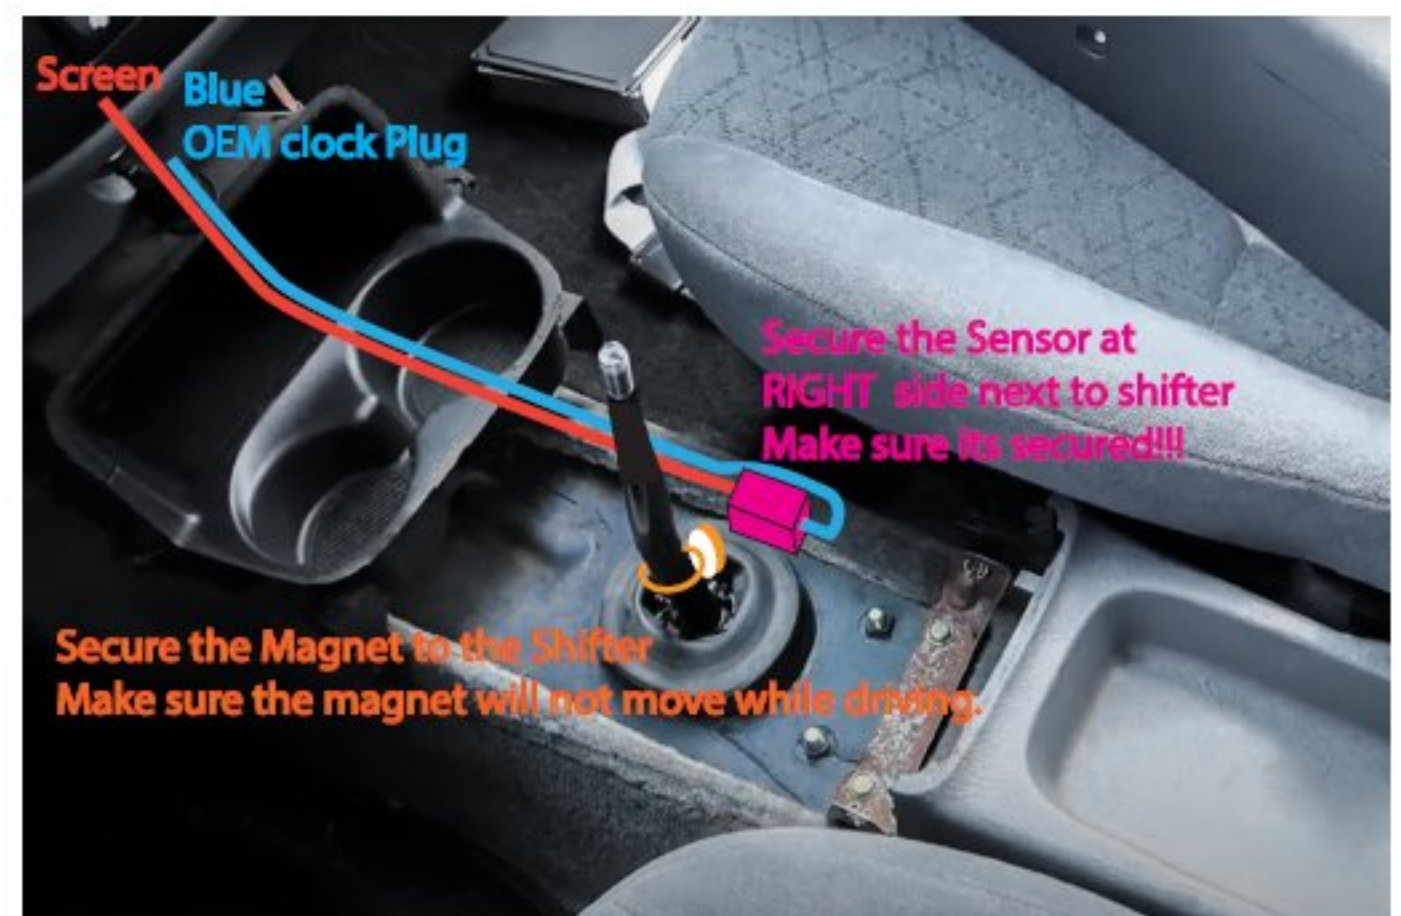

3.1: Attach the Magnet to the Gear Shifter

Secure the magnet firmly to the gear shifter. Make sure it does not spin or move while driving.

3.2: Mount the Sensor on the Centre Console

Stick the sensor onto the right side of the centre console (see diagram above). Ensure it's firmly fixed and won't move during driving.

3.3: Connect the Blue Plug

Plug the blue connector into your car's OEM clock male socket. If your car doesn't have an OEM clock, connect the red wire (POS) and black wire (GND) to a 12V ignition power source.

3.4: Route the Display Cable

Run the cable from the screen to the radio panel — where the original clock used to be installed.

Step 4: Install Screen Holder to Radio Panle (Clock Position)

4.1: Reinstall the Radio Panel

Put the radio panel back in place and carefully feed the screen through the original clock hole.

4.2: Feed the Screen through the Holder

Rotate the screen so that the short side goes in first through the long opening of the holder.

Do not force it in — if it feels too tight, remove it and try a different angle.



4.3: Test-Fit the Screen Holder

Test-fit the holder on the radio panel to check alignment and fit. (Do NOT Peel off the tape at this stage)

4.4: Installation of the Screen Holder

Once you've confirmed the holder fits properly:

- Clean the radio panel surface with isopropyl alcohol to ensure good adhesion.
- Peel off the protective film from the double-sided tape on the holder.
- Carefully align the holder with the radio panel — place it gently onto the surface.
- Double-check the alignment.
- If not aligned, gently removes it from the radio panel and start again. (Skip to next if it aligns)
- If everything looks good, press firmly and hold for 30 seconds to secure the holder in place.



Step 5: Screen Pre-Installation

5.1: Find the TOP Side of the Screen

the top side of the screen will be the one with a hole and a small button hinding in the hole. As shown in the picture below.

5.2: Align Screen with Holder

Align the screen four sides with the holder, and make sure its perfectly aligned, gently pushing it in (you might feel its very tight to push in, but still moving slowly). DO NOT PUSH ALL THE WAY IN !!! Push to still able to access the top side calibration button !!!



DO NOT PUSH ALL IN at this stage



Step 6: Calibration

SCAN the QR Code to Watch calibration guide Visit:

2027custom.com

Or Contact:

support@2027custom.com

If the QR code expired.

Step 7: FINAL STEP !!!!

7.1: Make Sure You Have Calibrated & Road Tested

DO NOT PUSH IN until Fully calibrated and Road Tested.



7.2: Insert the Screen into the Holder

Use both thumbs to push the screen into the holder.

- Important: Press only on the edges of the screen (the frame) — do NOT press on the glass.
- Push slowly but firmly until the screen sits flush with the surface of the holder.